


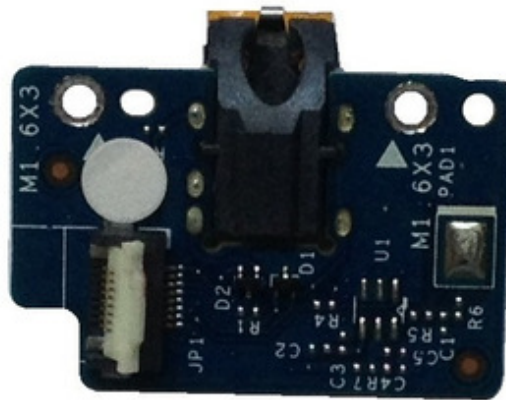

Acer Iconia B1-711 Audio Jack Connector Replacement

Acer Iconia B1-711 Audio Jack Connector Replacement

Written By: ZFix



INTRODUCTION

If you have a problem with the Audio Jack Connector, in this manual we will show you how to change it.

[Please SUBSCRIBE to my channel ツ](#)

[video: <https://www.youtube.com/watch?v=8-djJ2aXa60>]



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Switch-off the tablet.
 - Remove any SIM and/or Memory Card.
 - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.


Step 2



⚠ Before doing anything, disconnect the battery.

🌟 [Please SUBSCRIBE to my channel ツ](#)

Step 3 — Audio Jack Connector

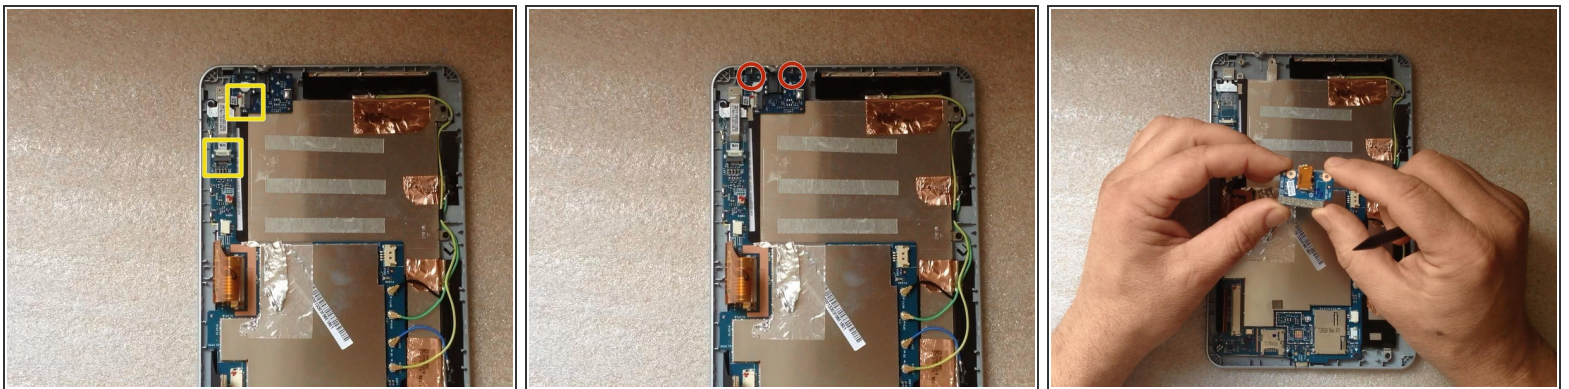

- Disconnect and remove the Audio Jack Board flex cable.
- Unscrew 2x Philips screws
- Remove the board with the Audio Jack Connector.
- .
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:29:42 AM.